

1/7

FIG. 1

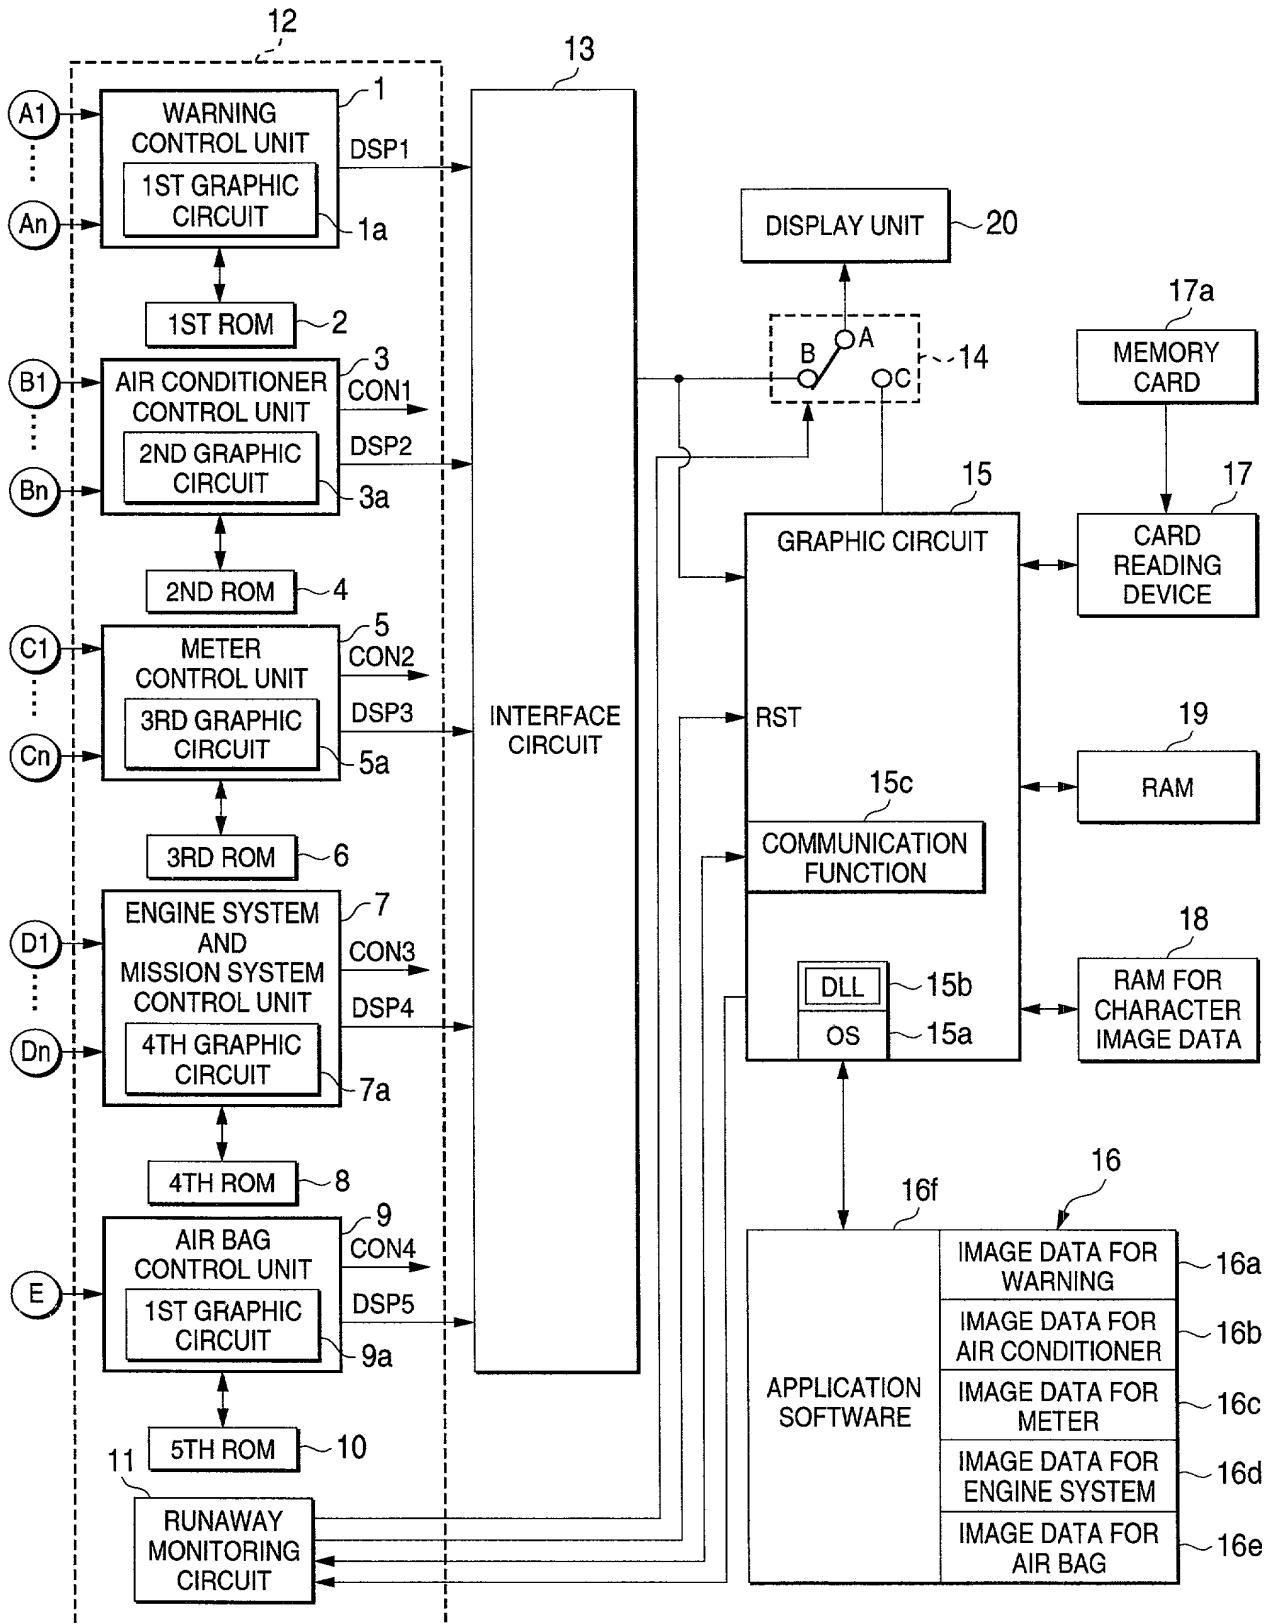
 
 


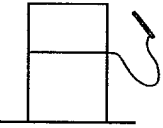
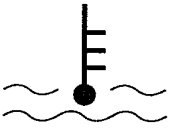



FIG. 2

2

ALARM ITEMS		MEMORY CONTENTS OF FIRST ROM 2	
(1)	BATTERY VOLTAGE ALARM		STOP AT A SAFE PLACE SOON AND CONTACT WITH DEALER.
(2)	ENGINE OIL PRESSURE ALARM		STOP AT A SAFE PLACE SOON AND CONTACT WITH DEALER.
(3)	CTV ALARM	CVT	AVOID HIGH SPEED RUNNING AND BE INSPECTED IN DEALER SOON.
(4)	SEAT BELT ALARM		FASTEN SEAT BELT.
(5)	REAR HOOD ALARM		DOOR AND HATCH ARE OPEN. CLOSE THEM.
(6)	FUEL REMAINING AMOUNT ALARM		NO FUEL EXISTS. GO TO GAS STAND.
(7)	WATER TEMPERATURE ALARM		STOP AT A SAFE PLACE SOON AND CONTACT WITH DEALER.

Q65683-2006T060

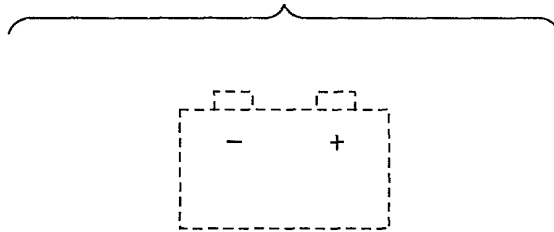FIG. 3



STOP AT A SAFE PLACE SOON, AND  
CONNECT WITH XX SALES COMPANY.

FIG. 4



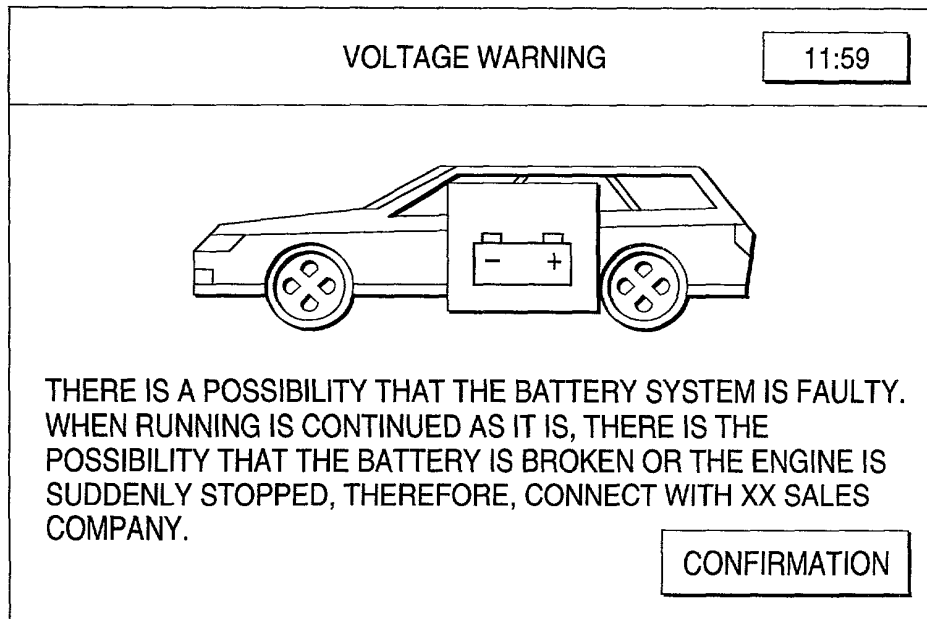


FIG. 5

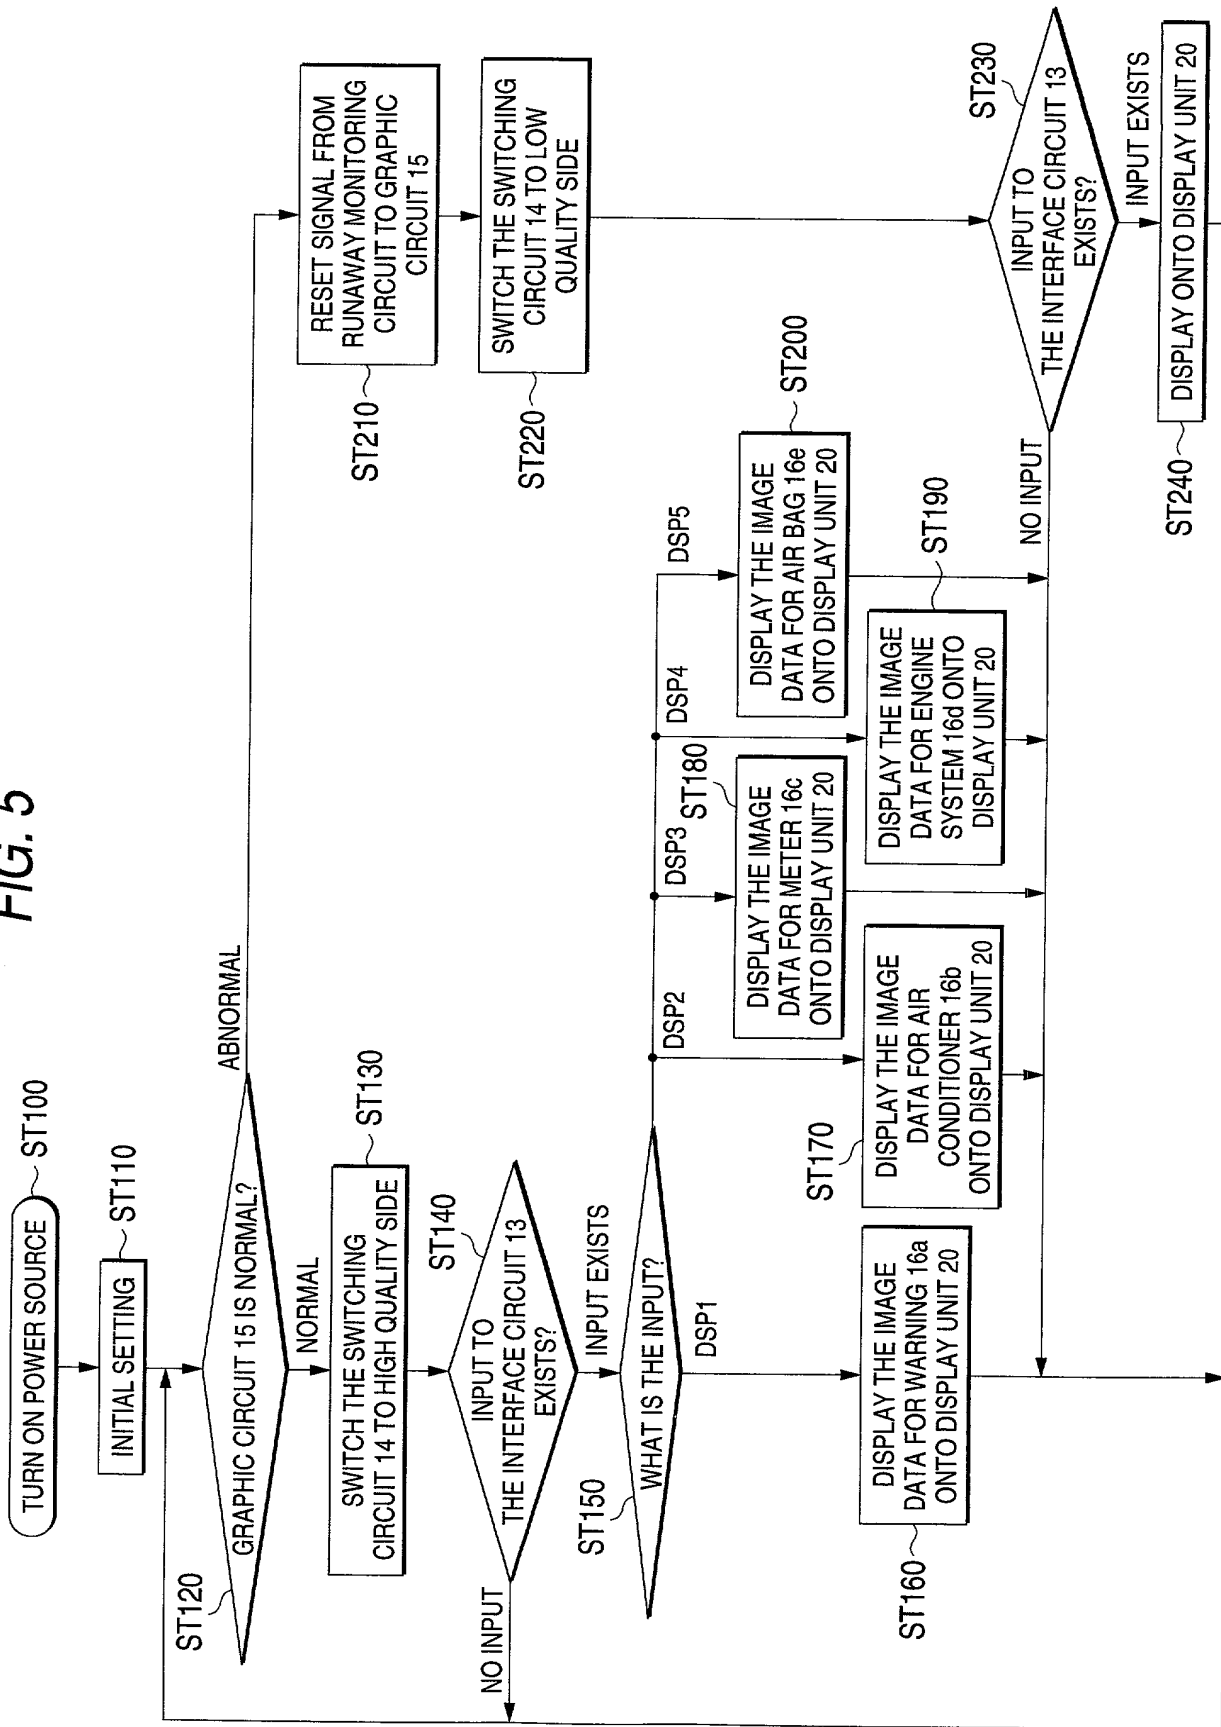


5/7

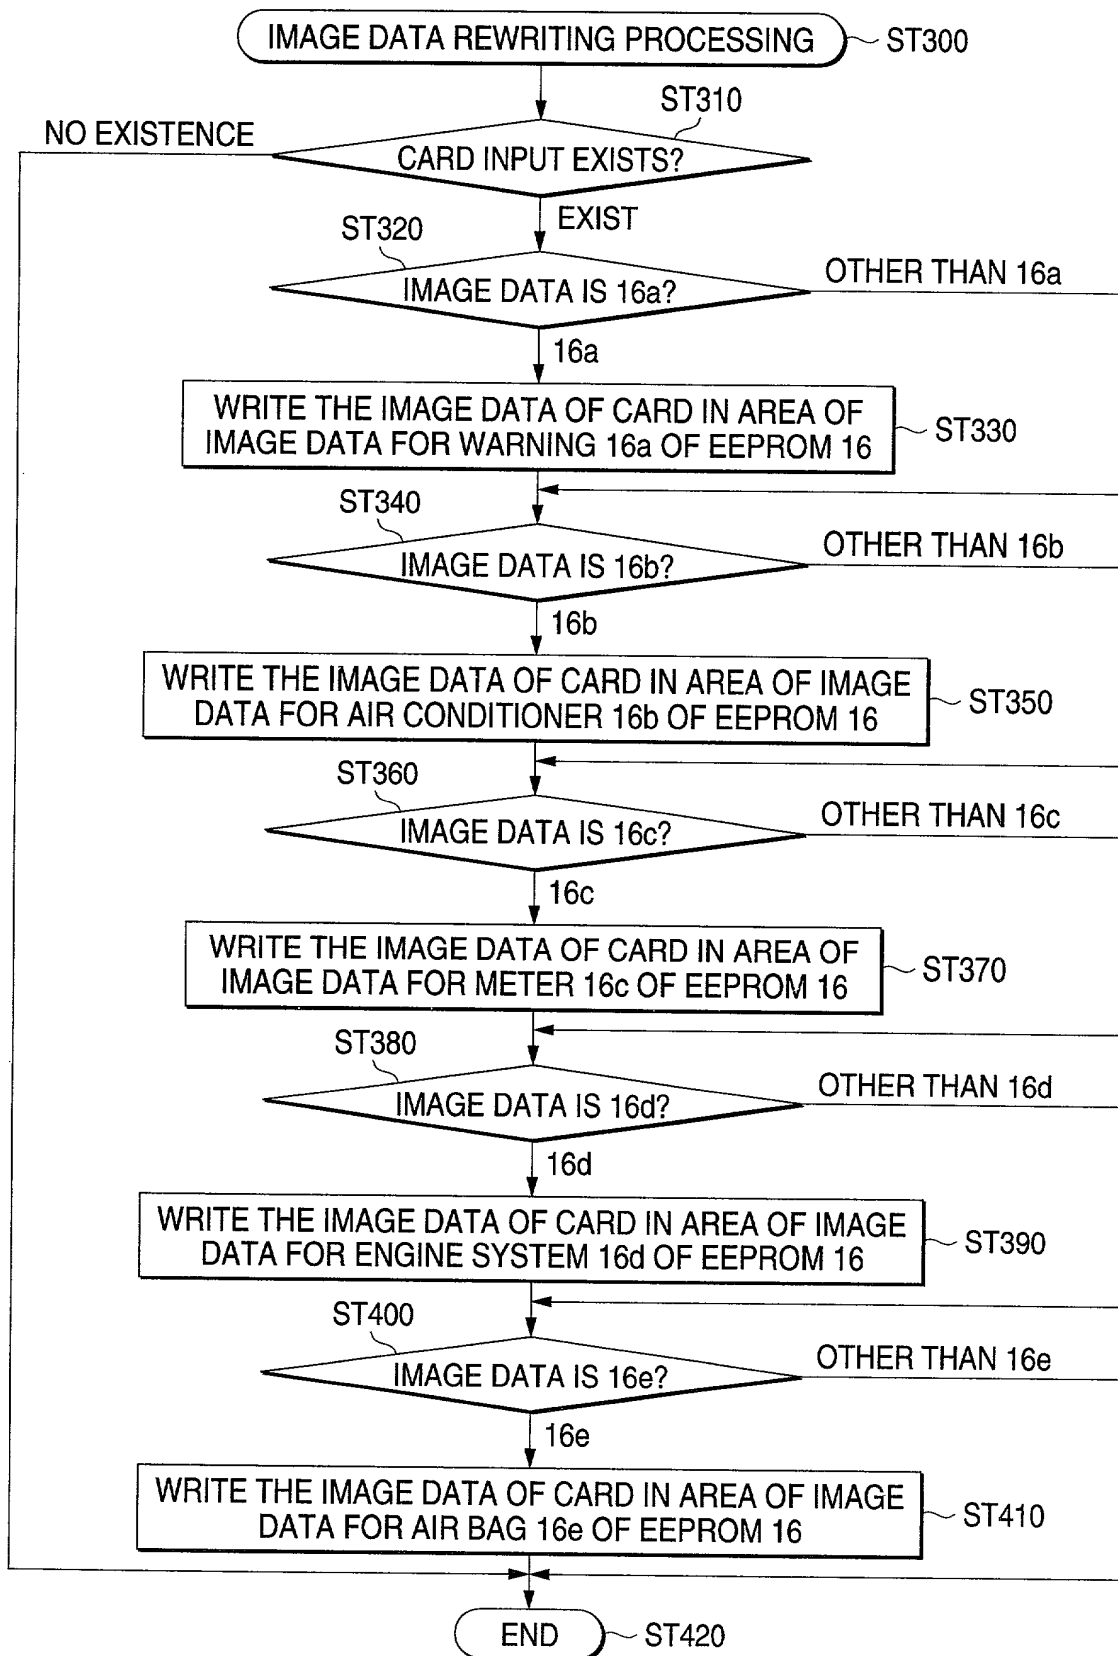FIG. 6



6/7

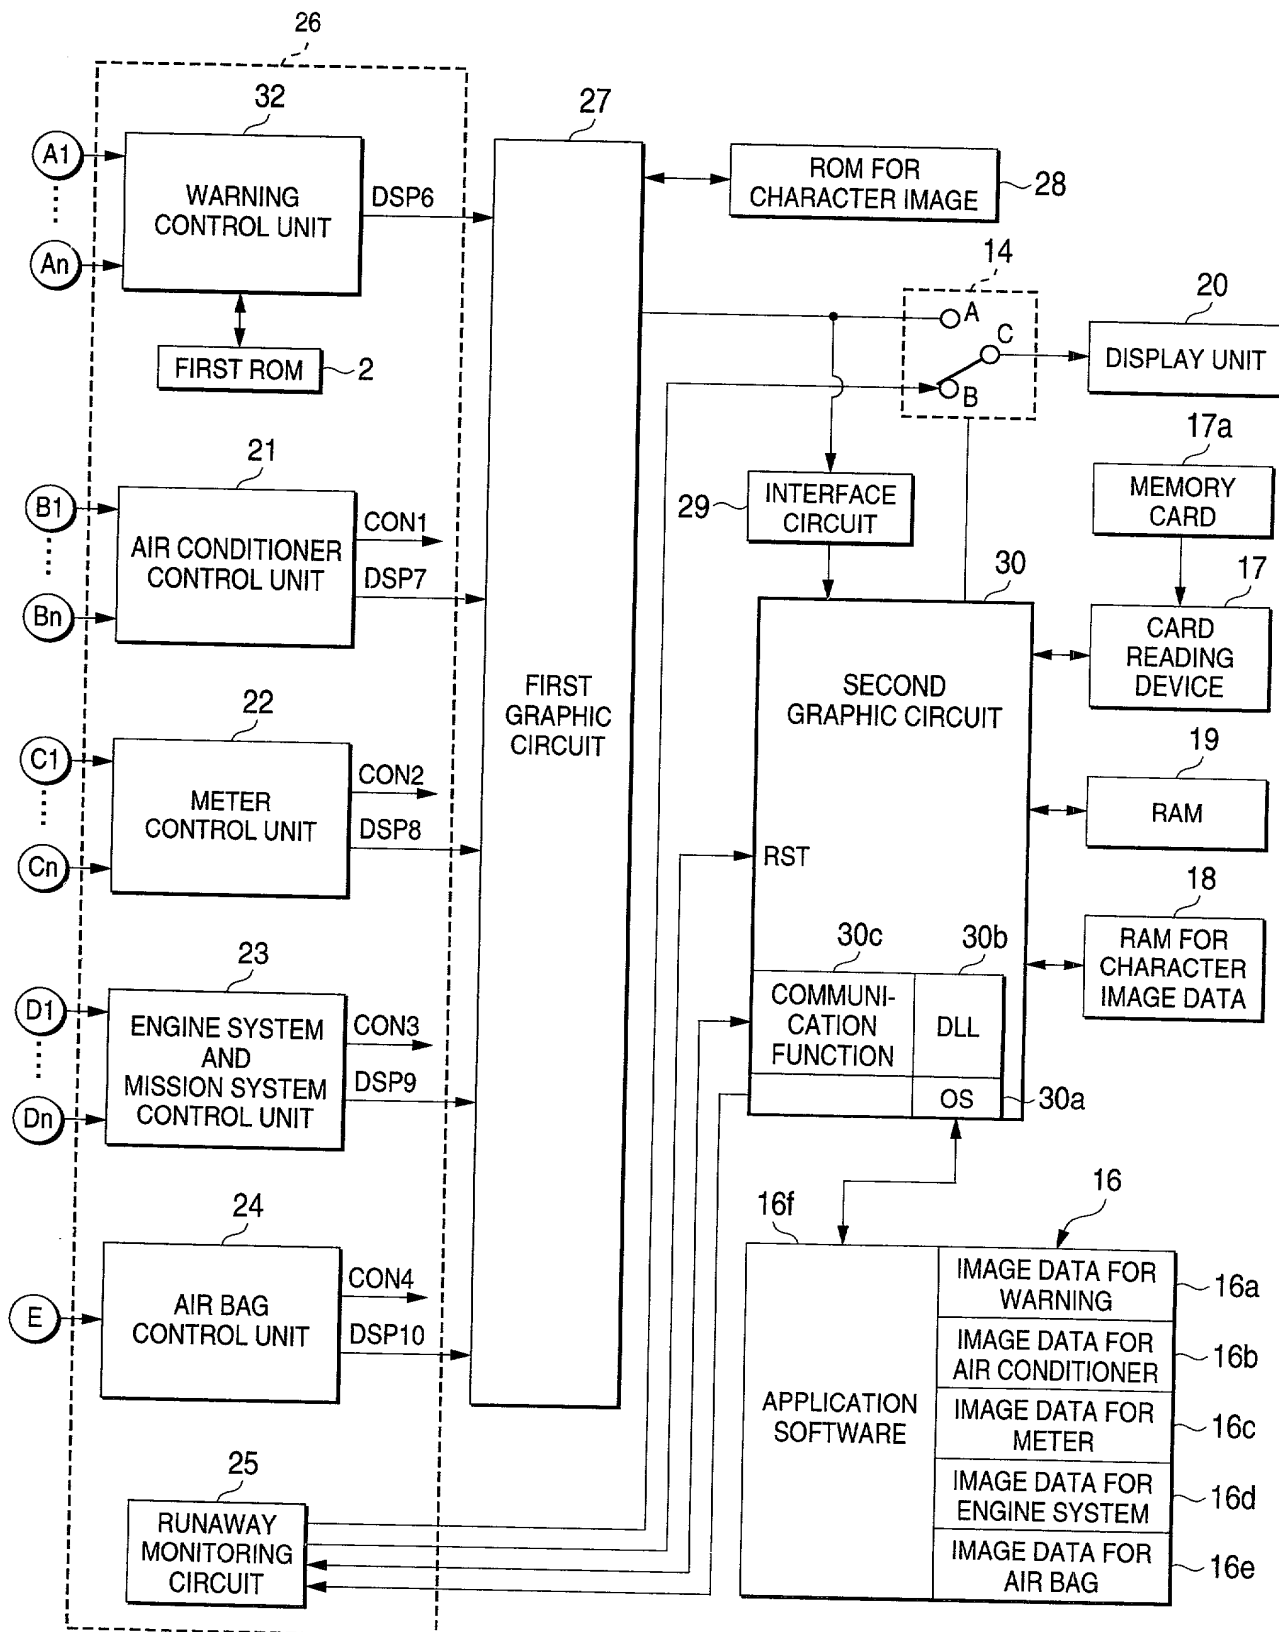FIG. 7



7/7

FIG. 8

